



PTO NOT WORKING

Check din plug LED (1) for power

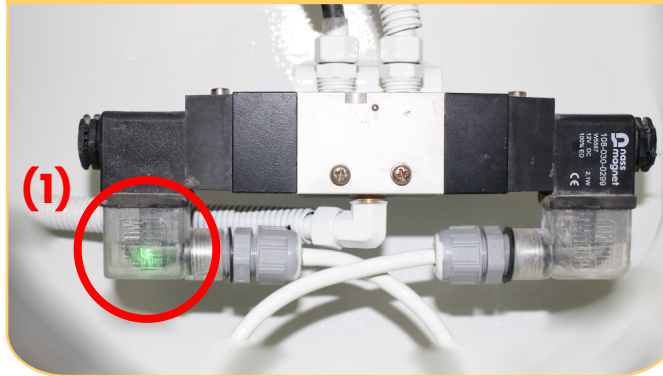

Push the button (2) on the double solenoid valve

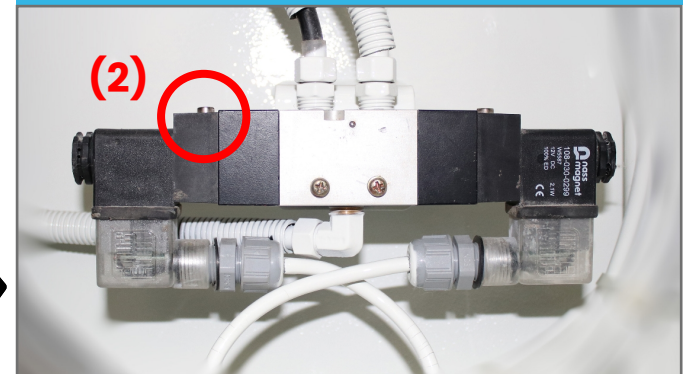

**Contact CONCORD
Service Department**

NO

Is LED(1) on?

YES


Change the double
solenoid valve

YES

Is PTO working?

NO

Change the regulator (4)

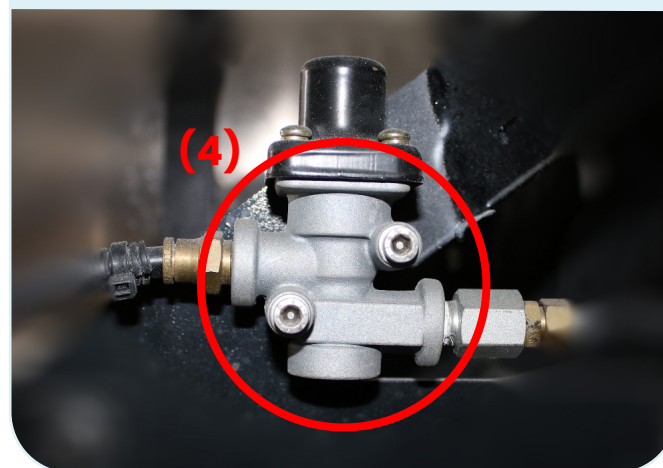

Remove the bottom
air line (3) and
check no air coming out

