



BOOM LIGHTS NOT WORKING (1/2)

Boom Lights Not Working

Check F9 fuse (15 Amp)
for Wire "#25"

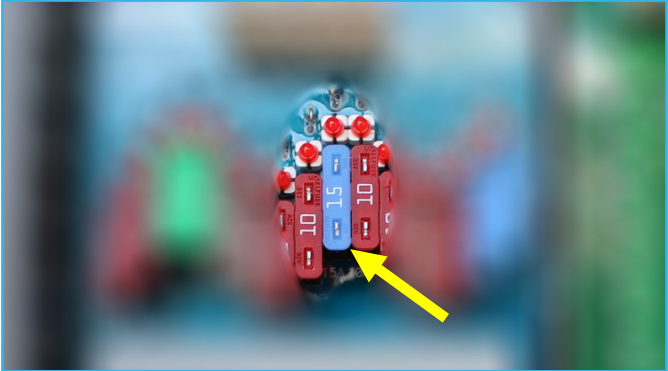

Check for power at pin 86
on CRE Relay

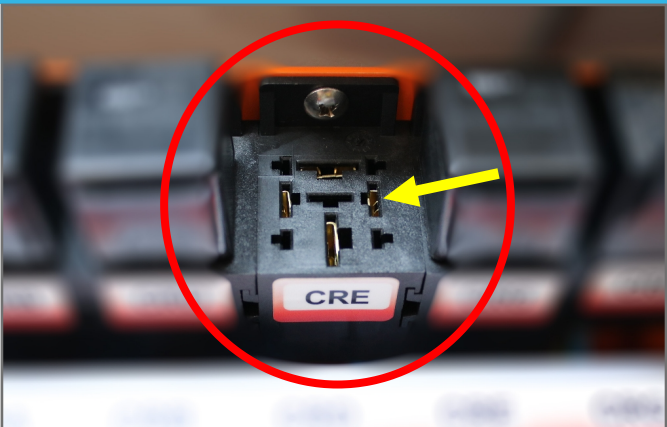

Replace F9 fuse

Is the fuse
blown?

YES

NO

Check for ground at pin 85
on CRE Relay



Is there
power?

YES

NO

Replace boom lamp switch




Check for ground wire/
Run new ground

Does it have
ground?

NO

YES

Check for power at pin 87
on CRE Relay

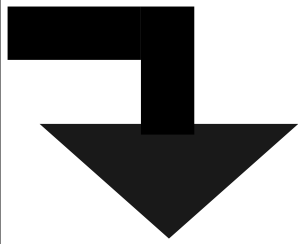

TO NEXT PAGE

BOOM LIGHTS NOT WORKING (2/2)

