

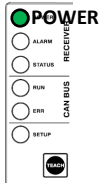
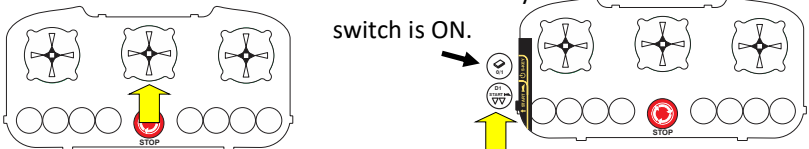

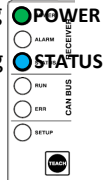
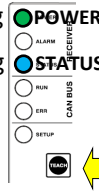

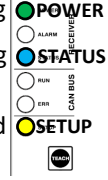
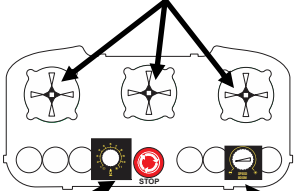


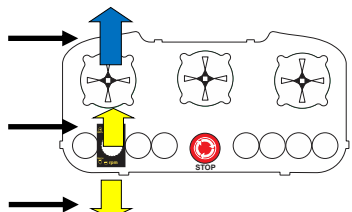

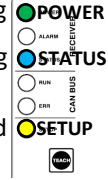
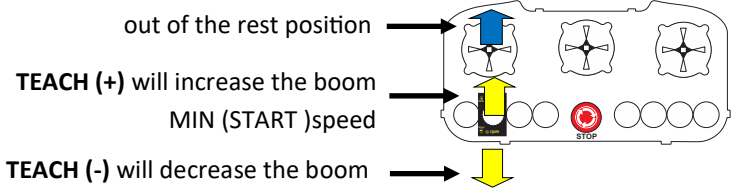




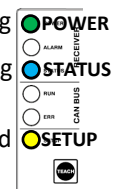




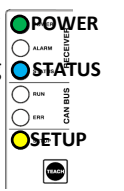
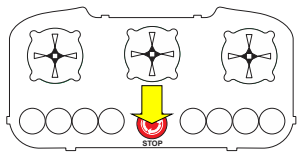
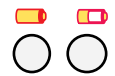






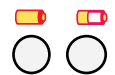


	<p>The procedures described in this manual are excerpts from the Part D of the user manual provided with the Radio Remote Control. For more information, refer to—Part D: ARM Receiving Unit.</p>
	<p>Before reading this part of the manual, you must read and understand all of the Manuals provided with the Radio Remote Control. Please refer to the following:</p> <ul style="list-style-type: none">Part A: Information, Instructions and General WarningsPart B: Conformity and FrequenciesPart C: Transmitting UnitPart D: Receiving UnitPart E: Rechargeable Battery and Battery Charger
 WARNING	<p>The REMOTE SETUP procedure can only be performed by skilled and properly trained personnel.</p> <p>During the REMOTE SETUP procedure, pay particular attention to the Machine behaviour, because the Machine performs movements (depending on the Machine, functions, etc.) during the output calibration: therefore, the person who performs this operation must make sure that it can be carried out in safety conditions, and must take all the necessary caution to prevent hazards for people and/or property. Once the REMOTE SETUP procedure is completed, the commands functions must be tested: operational tests must be performed, in order to become familiar with the modifications.</p> <p>Switch off the Transmitting Unit when not actively using the Radio Remote Control to operate the Machine, or when work is otherwise interrupted, even for short periods. Do not leave the load hanging or the Machine in dangerous conditions (even when changing the Unit or changing the battery).</p> <p>FAILURE TO DO SO CAN RESULT IN SERIOUS BODILY INJURY OR DEATH AND/OR PROPERTY DAMAGE.</p>

<h2 style="text-align: center;">STEPS</h2> <p style="text-align: center;">Calibration of the boom control MIN and MAX value for the sections of the boom movement.</p>	<h2 style="text-align: center;">Transmitter</h2> <p style="text-align: center;">LED</p>	<h2 style="text-align: center;">Receiver</h2> <p style="text-align: center;">LED</p>
<p>1. Apply Power to the Receiver. The Power LED ON solid.</p>		<p>ON Solid</p> 
<p>2. Start the Transmitter</p> <p style="text-align: center;">Make sure the key-switch is ON.</p>  <p>2A. Rotate CW and Release the STOP Button UP</p> <p>2B. Press the START button until the transmitter and receiver is link up</p>	<p>Slow Flashing</p> 	<p>Flashing</p> <p>Fast Flashing</p> 
<p>3. Press and hold TEACH button for approx. 10 sec or until SETUP LED is ON</p> 	<p>Slow Flashing</p> 	<p>Flashing</p> <p>Fast Flashing</p> <p>ON Solid</p> 
<p>4. Check all proportional functions (joysticks, and potentiometers) are in neutral position.</p> <p style="text-align: center;">All Joysticks in neutral</p>  <p>Rotate volume control fully counter clockwise (CCW)</p> <p>Rotate Boom Speed fully counter clockwise (CCW)</p>	<p>Slow Flashing</p> 	<p>Flashing</p> <p>Fast Flashing</p> <p>ON Solid</p> 
<p>5. To adjust the boom MAX setting, select the boom by moving the joystick to full extension.</p> <p>Hold the joystick at full extension</p> <p>TEACH (+) will increase the boom MAX (FINAL) speed</p> <p>TEACH (-) will decrease the boom MAX (FINAL) speed</p> 	<p>Slow Flashing</p> 	<p>Flashing</p> <p>Fast Flashing</p> <p>ON Solid</p>  <p style="text-align: center;">SEE NEXT PAGE...</p>

<p style="text-align: center;">STEPS</p> <p style="text-align: center;">CONTINUATION</p>	<p style="text-align: center;">Transmitter</p> <p style="text-align: center;">LED</p>	<p style="text-align: center;">Receiver</p> <p style="text-align: center;">LED</p>
<p>6. To adjust the boom MIN setting, select the boom by moving slightly out of the rest position. Hold the joystick at slightly out of the rest position</p>  <p>TEACH (+) will increase the boom MIN (START) speed</p> <p>TEACH (-) will decrease the boom MIN (START) speed</p>	<p>Slow Flashing </p>	<p>Flashing  POWER</p> <p>Fast Flashing  STATUS</p> <p>ON Solid  SETUP</p> 
<p>7. Repeat STEPS 5-6 to calibrate the other boom sections.</p>	<p>Slow Flashing </p>	<p>Flashing  POWER</p> <p>Fast Flashing  STATUS</p> <p>ON Solid  SETUP</p> 
<p>8. Press the STOP button down to SAVE the settings.</p> 	<p>OFF </p>	<p>ON Solid  POWER</p> <p>ON Solid  SETUP</p> 
<p>ON Solid  POWER</p> <p>ON Solid  SETUP</p> <p>9. To EXIT SETUP Mode. Press and hold TEACH button until SETUP LED is OFF.</p> 	<p>OFF </p>	<p>ON Solid  POWER</p> 
<p style="text-align: center;">END</p>		